

» Features

**Download** 

» Drawing


Print


[ IPC


» Specification Table » Installation Instructions


Q&A



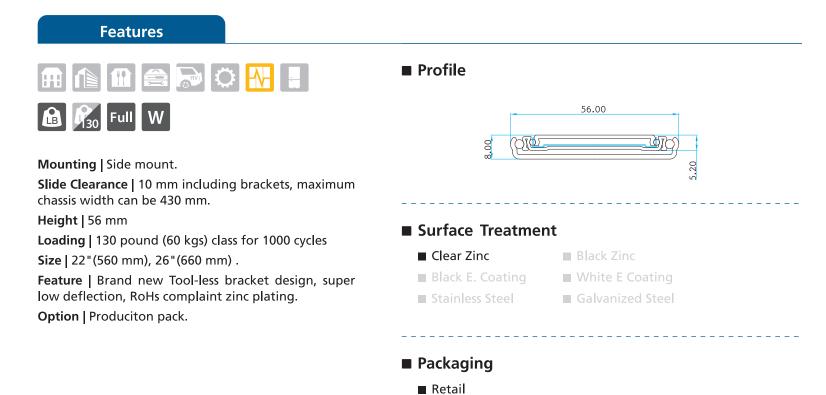

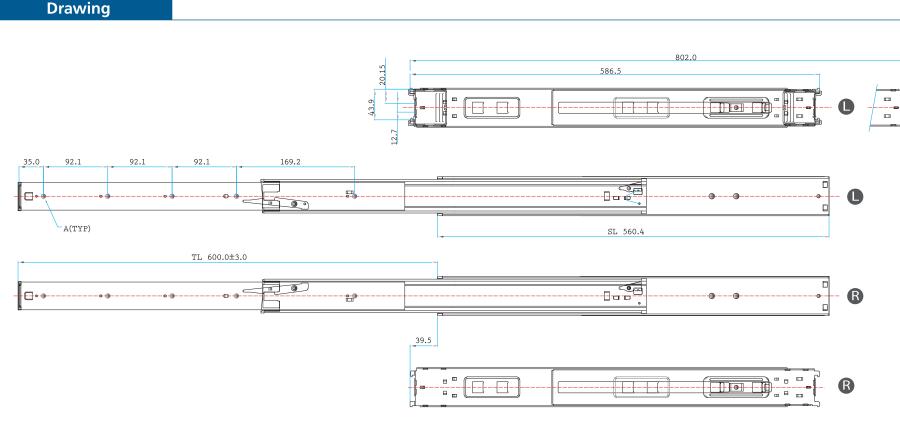

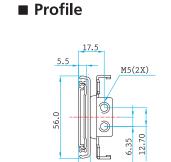

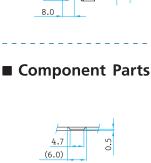

DETAIL A


**Specification Table** 

SIZE	SL	TL	Α	В
<b>22"</b> (550mm)	560.4	600.0	169.20	
<b>26"</b> (650mm)	660.4	700.0	184.20	92.10


**Installation Instructions** 


## QUICK INSTALLATION GUIDE FOR NJ-21D08 (Tool-less server slides)


Samurai Plus Server Slide, 130 pound (60 kgs) loading Designed for 3U application or above. Chassis width requirement-430 mm.

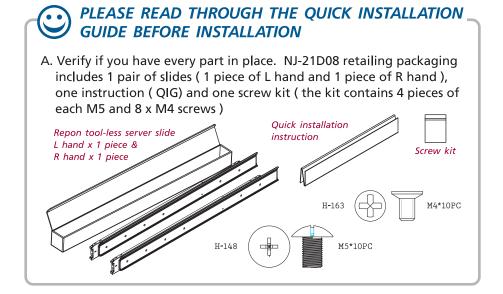


## Step 7 > Bracket mounting position & other essential dimensions

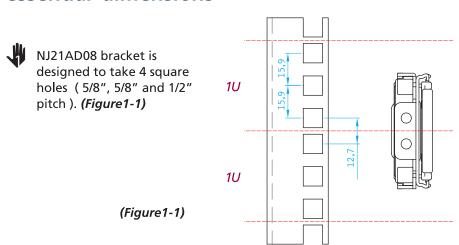

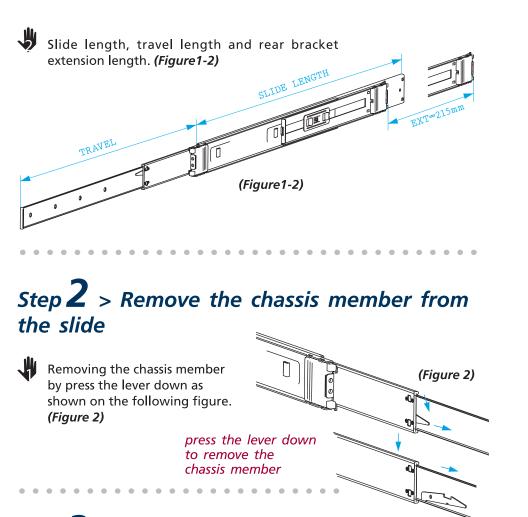


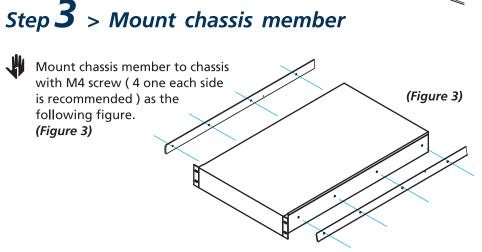




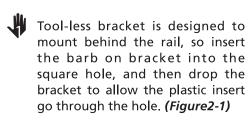

 You may always push the plastic insert backward in order to detach the brackets from rails.

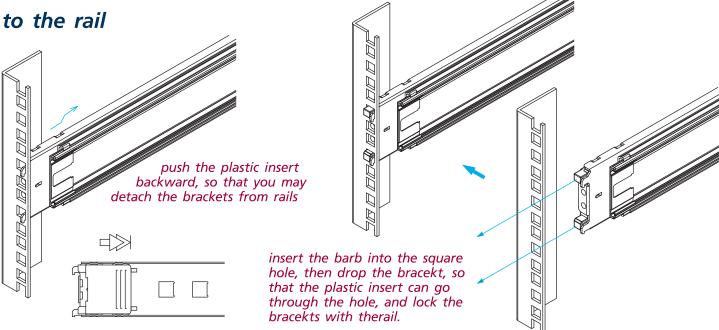






You need to release the slide from lock open in initial insertion, then push the chassis all the way back to fully closed position. (Figure 5-2)

Open and close the chassis back and forth. If there is any binding or unexpected friction, one of the causes could be bracket misalignment.

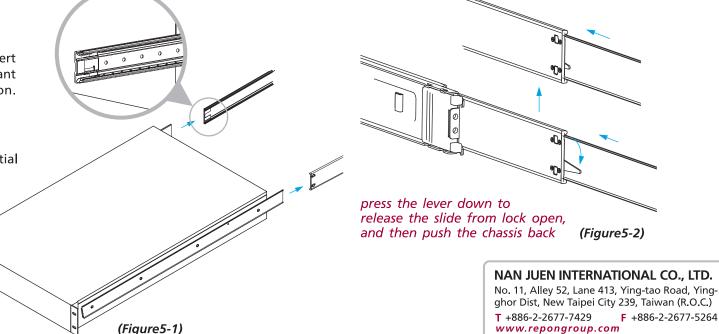

(Figure 5-1)



Go Top