

» Features



» Drawing

Print





» Specification Table » Installation Instructions



Features

Mounting | Side mount. Side Clearance | 1/2"(12.7 mm) plus 0.76 mm, minus 0 each side.


Height | 45.7 mm

Loading | 75 pound (35 kgs) for 30,000 cycles.

Size | 300 mm to 700 mm at 50 mm increment Feature | 32 mm hole pattern, simple access mounting on drawer and cabinet members, breather tab for side adjustment, trigger disconnect, detent-in.

Option | None.

■ Profile

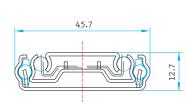

■ Surface Treatment

- Clear Zinc
- Black Zinc ■ White E Coating
- Black E. Coating ■ Stainless Steel ■ Galvanized Steel


Packaging

- Distribution / 15 pairs per box
- Production

*Box QTY might vary with different length, the info provided here is based on 18" (450 mm)

Drawing

TL±3.0 SL±0.25 IV(TYP) III II(TYP) (00 0 35.0

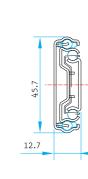

■ Profile

Specification Table

SIZE		SL	TL	Α		C	D				Н		J
12"	(300mm)	300.00	325.00	128.0	224.0			96.0	224.0				
14"	(350mm)	350.00	375.00	128.0	224.0			96.0	288.0				
16"	(400mm)	400.00	425.00	128.0	224.0	320.0		96.0	160.0	288.0	352.0		
18"	(450mm)	450.00	475.00	128.0	224.0	352.0		96.0	192.0	288.0	384.0		
20"	(500mm)	500.00	525.00	128.0	224.0	352.0	416.0	96.0	192.0	384.0	448.0		
22"	(550mm)	550.00	575.00	128.0	224.0	352.0	448.0	96.0	192.0	384.0	480.0		
24"	(600mm)	600.00	625.00	128.0	224.0	352.0	480.0	96.0	192.0	256.0	384.0	480.0	544.0
26"	(650mm)	650.00	675.00	128.0	224.0	352.0	544.0	96.0	192.0	288.0	480.0	576.0	
28"	(700mm)	700.00	725.00	128.0	224.0	352.0	544.0	96.0	192.0	288.0	480.0	576.0	640.0

Installation Instructions

QUICK INSTALLATION GUIDE OF NJ-31Q08


Loading, Full Extension Slides, 75 pound (35 kgs) loading

READ THE QUICK INSTALLATION GUIDE FIRST BEFORE INSTALLATION A. Recommended screws for fixing - #8 pan head screws. Each side of slide requires at least 6 screws.


Technical Specifications for drawer or pull-out shelf

① Drawer or pulling-out shelf must be at least 12.7 mm or 1/2" narrower than cabinet opening on each side.(DIM A)

② Bottom of drawer or pulling-out shelf bottom shall have 6.4 mm or 1/4" minimum clearance from the bottom of cabinet. (DIM B)

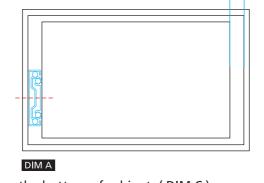


③ Mark a 61 mm or 2 2/5" line from the bottom of cabinet. (DIM C) ④ Mark a 44 mm or 1 3/4" line from the bottom of drawer. (DIM D)

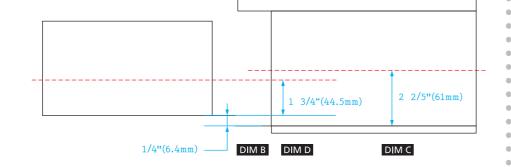

Step **1** > Install cabinet member to cabinet

Push down or lift up release trigger on the right or left to disconnect the drawer member. (Figure 1-1) Push down at right hand (Figure 1-1) side or lift up at left hand side

Align top of cabinet member to the 61mm or 2 2/5" line, and place slide 2 mm backward from cabinet opening. (Figure 1-2)

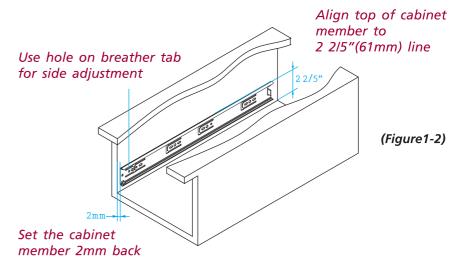


Fix the slides through the most flexible holes on breather tab for best slide performance. Leave the screw loose for final adjustment. Move the slides back and forth, and make sure no screw is bound.

Step 2 > Install drawer member to drawer

Align top of drawer member to the 44 mm or 1 3/4" line, and place drawer member 2 mm backward from the drawer front or the pulling-out shelf edge. Shall the silencing cushion is used, place drawer member 5.2 mm backward. (Figure2-1)

Fix the drawer member through vertical slots for vertical adjustment. Leave the screw loose for final adjustment.

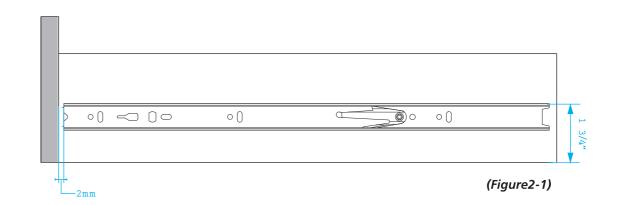


Step 3 > Insert drawer into cabinet and adjustment

Make sure the bearing retainers are fully forward. Insert drawer member into the cabinet member, and then close the drawer completely. (Figure 3-1)

Final Adjustment......

Try to open and close the drawer to see if slides function correctly. If so, secure the screws and install additional screws as necessary. If not, please make adjustment till slides function correctly.

*This instruction is for reference only. It may vary due to different applications.

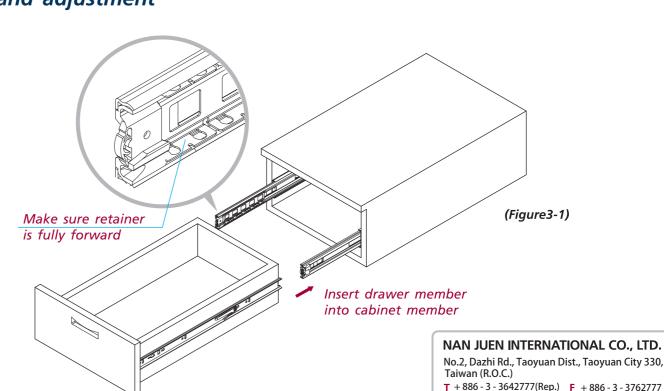





www.repongroup.com